809 High Speed Inline DC



Specifications

MARCH PUMPS

1819 PICKWICK AVE., GLENVIEW, IL 60026-1306, U.S.A PHONE: (847) 729-5300 - FAX: (847) 729-7062 WWW.MARCHPUMP.COM

DESCRIPTION & OPERATION: 809-HS Series hot water booster centrifugal magnetic drive pumps are built to handle liquid transfer in heating and cooling operations. Contact the factory for application assistance. Pumps are not self-priming, lack a suction lift, and thus require a flooded suction. Pumps cannot be run dry.

INSTALLATIONS: Pumps should be installed with the pump housing arrow pointing in the direction of flow within the system. If the arrow indicating flow is not in the direction required, remove the housing screws holding the housing to the motor bracket and rotate the housing assembly as required. Replace the screws and tighten. The pump is composed of a wet end assembly which can be separated by unscrewing the housing screws. The pump will then separate into 2 parts. The liquid will be contained within the wet end assembly unless the rear housing screws on the rear housing are loosened.

<u>GENERAL SAFETY INFORMATION</u>: Follow all local safety codes & the Occupational Safety and Health Act (OSHA). Make certain that the power source conforms to the requirements of your equipment. Always disconnect power source before performing any work on or near the electric motor. Caution must be exercised to relieve any pressure in the system & in draining hot water from the pump or the system.

ELECTRICAL: Motor type is brush DC in 12 Volt or 24 Volt. The red lead is positive & the black lead is negative.


809-BR-HS

			L.P.M.			
0	5	10	15	20	25	30
16 •						- 5
>						
15						
14 •	\mathbf{h}			-		
13 •				_		4
12 •						
11 .						
10 •				-		- 3
9 .			$\backslash \vdash$	_		
8 •						
112.31			Ν			
7 •						- 2
6						
5 .				λ		
4 .						
						+ 1
3 •						
2 .				+ \		
1.	_				N	
0						0

specifications				809-ВК-ПЗ		809-PL-HS		809-33-83			3 •		
Product			12V	0809-0101-0100		0809-0157-0100		0809-0215-0300		1			
			24V	0809	-0103-0	0100	0809-	0158-0100	0809-02	15-0400		2 -	
Inlet-Outlet				1/2"MPT-1/2"MPT 150PSI (1034 kPa)		"MPT						1.	
Max Internal I	Max Internal Pressure					kPa)					0		
Max Liquid Temperature		ire		250F (121C)		250F (121C)		250F (121C)			U		
	Max	Max Flow Max Head Electrical							Packed Weight				
Model	GPM	LPM	FT	PSI	М	\	/	А	HP	kW	RPM	Pounds	
809-HS-BR	6	22.7	15.5	6.7	4.7	12 c	or 24	3.5 or 1.8	1/25	0.029	3650	5.5	
809-HS-PL	6	22.7	15.5	6.7	4.7	12 c	or 24	3.5 or 1.8	1/25	0.029	3650	4.5	
809-HS-SS	6	22.7	15.5	6.7	4.7	12 c	or 24	3.5 or 1.8	1/25	0.029	3650	5.5	
					1				1				

809-PL-HS

809-SS-HS

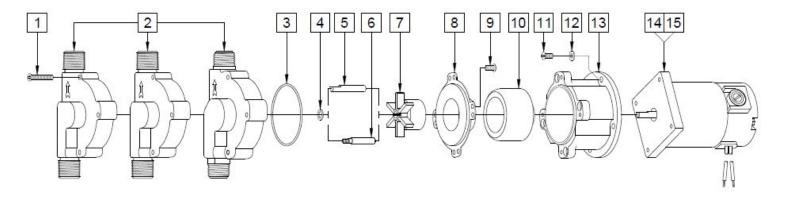

809-HS-BR					809-HS-PL						
ltem	Part Number	QTY REQ	Description		Part Number	QTY REQ	Description				
1	0923-0003-1000	4	#8-32 x 1 Lg. Screw (Steel)	1	0923-0003-1000	4	#8-32 x 1 Lg. Screw (Steel)				
2	0809-0013-0000	1	Pump Housing (Bronze)	2	0809-0079-0100	1	Pump Housing (Polysulfone)				
3	0809-0165-1000	1	0.070 CS x 2.441 ID O-Ring (Silicone)	3	0809-0027-1000	1	1/16 CS x 2-3/8 ID O-Ring (Silicone)				
4	0809-0043-1000	1	Thrust Washer (Teflon)	4	0809-0043-1000	1	Thrust Washer (Teflon)				
6	0809-0214-1000	1	Left-Hand Thread (Stainless Steel)	5	0809-0161-1000	1	"D" Flat Shaft (Stainless Steel)				
7	0809-0005-0200	1	1-11/16" Impeller (Ryton/Teflon/Glass)	7	0809-0005-0200	1	1-11/16" Impeller (Ryton/Teflon/Glass)				
8	0809-0012-1000	1	Rear Housing (Stainless)	8	0809-0012-1000	1	Rear Housing (Stainless)				
9	0135-0040-1000	4	#8-32 x 3/8Lg. Screw (Stainless)	9	0135-0040-1000	4	#8-32 x 3/8Lg. Screw (Stainless)				
10	0125-0083-0100	1	Drive Magnet (0.250 Bore)	10	0125-0083-0100	1	Drive Magnet (0.250 Bore)				
11	0150-0015-1000	4	#8 –32 x 1/2 Lg Screw (Stainless Steel)	11	0150-0015-1000	4	#8 –32 x 1/2 Lg Screw (Stainless Steel)				
12	0858-0004-1000	4	#8 Washer (Stainless)	12	0858-0004-1000	4	#8 Washer (Stainless)				
13	0809-0058-1000	1	Motor Bracket (Plastic)	13	0809-0058-1000	1	Motor Bracket (Plastic)				
14	0809-0101-1000	1	12V Brush Motor	14	0809-0101-1000	1	12V Brush Motor				
15	0809-0103-1000	1	24V Brush Motor	15	0809-0103-1000	1	24V Brush Motor				
			809-HS-SS	DISASSEMBLY & REASSEMBLY: The motor can be removed from the wet end as-							
1	0809-0205-1000	4	#8-32 x 1 Lg. Screw (Stainless)				uid from the system. To do so remove four housing embly away. If parts inside the wet end assembly				
2	0809-0211-0010	1	Pump Housing (Stainless Steel)	must be removed, isolate the pump or drain the system. When the system is							
3	0809-0165-1000	1	0.070 CS x 2.441 ID O-Ring (Silicone)	drained and cool, remove the four screws from the rear of the housing. The rear housing can now be removed. Remaining pump parts can be removed. Replace any worn or damaged parts. Replace the O-ring anytime the rear housing is removed.							
4	0809-0043-1000	1	Thrust Washer (Teflon)								
6	0809-0214-1000	1	Left-Hand Thread (Stainless Steel)								
7	0809-0005-0200	1	1-11/16" Impeller (Ryton/Teflon/Glass)								
8	0809-0012-1000	1	Rear Housing (Stainless)								
9	0135-0040-1000	4	#8-32 x 3/8Lg. Screw (Stainless)								
10	0125-0083-0100	1	Drive Magnet (0.250 Bore)	Materials in contact with the liquid:							
11	0150-0015-1000	4	#8 –32 x 1/2 Lg Screw (Stainless Steel)	809-HS-BR: Bronze, Stainless Steel, Ryton/Teflon/Carbon, Silicone, Teflon							
12	0858-0004-1000	4	#8 Washer (Stainless)	809-HS-PL: Polysulfone, Stainless Steel, Ryton/Teflon/Carbon, Silicone, Teflon							
13	0809-0058-1000	1	Motor Bracket (Plastic)	809-HS-SS: Stainless Steel, Ryton/Teflon/Carbon, Silicone, Teflon							
14	0809-0101-1000	1	12V Brush Motor	7							
15	0809-0103-1000	1	24V Brush Motor								
NOTE	NOTE: Contact Factory for other materials and/or parts not listed. Special voltage motors are available upon special order										
LIM	LIMITED WARRANTY: March pumps are guaranteed only against defects in workmanship or materials for a period of one year from date of manufacture pumping										

THED WARKANTY: March pumps are guaranteed only against detects in workmanship or materials for a period of one year from date of manufacture pumping water. For the complete warranty and to register online go to www.marchpump.com/warranty-registration